

# STOPWATCHES

## MULTI-FUNCTION STOPWATCHES

### **DTZ6**

Soccer watch



#### ***Features:***

- 12 / 24 hours user option
- Hour, Second, Month, Date, Weekday and alarm
- Auto calendar
- Soccer timer and stoppage timer keep track of stoppage time
- Presetable timer (up to 99 min)
- **Electroluminescent backlighted LCD**
- Lithium battery CR2016 3V
- Size : 4 cm x 5 cm x 1 cm
- Weight : 65 g

## **INSTRUCTION MANUAL STOPWATCH DTZ6**

### **FEATURES:**

- Hour, minute, second, month, date, weekday, and alarm (user option day alarm)
- Auto calendar
- Soccer timer and stoppage timer to keep track of stoppage time
- Timer with range 99minutes
- Electro-luminescent back lighted LCD
- 12/24 hour display and month/day reversal by user option

### **NORMAL DISPLAY:**

The normal display is as shown in Fig. 1. In this display hour, minute and seconds are shown on the lower row, month, Date and weekday on the middle row and the alarm hour and minutes on the top row.



### **TIME SETTING:**

1. When the watch is in the NORMAL display, press and hold B for 2 seconds will go into the TIME SETTING mode with the SEC digits flashing.
2. Pressing A will reset the SEC to 00 and starts again right away.
3. Press C to select sequentially HOUR, MINUTE, YEAR, MONTH, DATE, and 12/24HR.
4. When the digits are selected they are flashing, press A to advance these selected digits.
5. When setting is completed press B to complete the TIME SETTING and the display will return to the NORMAL DISPLAY. (When the 12/24HR is set to 12 hr, the time will be displayed in 12 hour system with the middle row displayed in MONTH, DATE and WEEKDAY. When it is set to 24hr, the time will be displayed in 24 hour system with the middle row displayed in DATE, MONTH and WEEKDAY.)

### **ALARM:**

1. From NORMAL DISPLAY press C will display the ALARM time.
2. Press and hold B for 2 seconds to go into the ALARM SETTING mode with the ALARM HOUR digits flashing.
3. Press A to set the ALARM HOURS.
4. Press C to select sequentially ALARM MINUTES, MONTH and DATE and press A to advance. When the digits are selected they are flashing. When the month or date is not set (remain - - - -), the alarm will sound everyday at the preset alarm time. When the month or date is set, the alarm will sound only at the preset time at that preset date or month. When the digits have been advanced the alarm is automatically armed.
5. Pressing A in the ALARM mode will arm or disarm the alarm. When armed the indicator at the top left corner of the display is turned ON. When the normal time matches the ALARM time the alarm sounds 30X2 short beeps and the EL backlight flashes.
6. Pressing any button when the alarm sounds will stop the sound and the alarm remains armed.

### **SOCCER TIMER:**

1. From the ALARM time display press C to go into the SOCCER TIMER display mode.
2. In the SOCCER TIMER mode the hour, minute and seconds are displayed on the lower row, the SOCCER TIMER on the middle row and the STOPPAGE TIMER on the upper row. The SOCCER TIMER is preset to 45 minutes (can be set to other values by pressing and holding B for 2 seconds when the timer is not counting down.) and the countdown can be started by pressing B once and release. The STOPPAGE TIMER is a count-up timer for keeping track of the stoppage time.
3. Press A to start in stoppage times and A again to stop when the play resumes. When the STOPPAGE TIMER is counting the 4 digits are flashing together. At 30 and 15 minutes before the countdown reaches 00:00 00, the timer will give 1 single beep. After crossing 0 the SOCCER TIMER will start counting up. At 30 seconds before the time of the STOPPAGE TIMER the timer will give 15X 4 short beeps to alert the user that the play time is almost up.
4. When the SOCCER TIMER and the STOPPAGE TIMER matches, the timer will give 10X3 short beeps to tell the user that the play time is finished. Pressing any button will stop the sound.
5. The SOCCER TIMER keeps running until B is pressed. Press and hold B for 2 seconds will reset the SOCCER TIMER to the previously set countdown time.
6. Press and hold A for 2 seconds will reset the STOPPAGE TIMER. Press and hold B for 2 seconds while the SOCCER TIMER is reset will go into the SET SOCCER TIMER mode with the MINUTE digits flashing.
7. Press A to set the timer minutes, maximum range 99 minutes. Press C to go to the SET SEC and press A to set the timer seconds, maximum 59 seconds. When the SOCCER TIMER has been set, press B to complete the SET SOCCER TIMER mode and return to the SOCCER TIMER display mode.

### **CARE OF YOUR STOPWATCH**

#### **\*WATER-RESISTANCE**

The stopwatch is designed and manufactured to withstand accidental contact with water such as splashes or rain, but it is not designed for swimming or diving.

#### **\*TEMPERATURE**

Do not leave your stopwatch under direct sunlight or in very high temperatures for a long time, or the display may become black. Do not leave your stopwatch in very low temperature as this may cause a slight time loss or gain and the change of digits becomes slow. In both cases the above conditions will be corrected when the stopwatch returns to normal temperature.

#### **\*SHOCKS**

Be careful not to drop your stopwatch or hit it against hard surfaces as it may cause mechanical damages.

#### **\*STATIC ELECTRICITY**

The integrated circuit in your stopwatch can be affected by static electricity. If the static electricity is very strong a permanent damage can occur. Be careful of the screen of the TV set and the wearing of clothing made of synthetic materials in dry weather; in such cases a very strong static electricity can be generated.

#### **\*MAGNETISM**

Not affected.

#### **\*CHEMICALS**

Do not expose your stopwatch to solvents such as gasoline and alcohol, spray of cosmetics, cleaners, paints etc as they may cause damage to the stopwatch.

#### **\*BATTERY CHANGE**

When the display becomes dim or turned off, battery replacement is necessary. We recommend you to go to your dealer or a qualified technician. Replace with Lithium battery CR2016 or equivalent.

#### **\*TROUBLESHOOTING**

If for any reason the stopwatch display becomes freeze up, press all 4 buttons at the same time to reset the stopwatch. If the problem still exists, take back the stopwatch to an authorized servicing centre for service. Do not try to repair it yourself.

**Use a battery of quality.**

**THE WARRANTY DOES NOT COVER THE BATTERY.**